
PICTURE PERFECT SOUND®





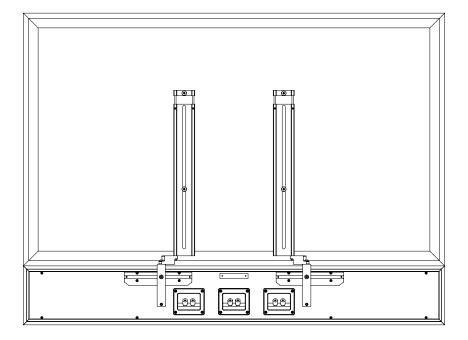

Completed Assembly



Universal TV Mount Hardware



8 x M6 Screw



8 x M8 Screw



12 x Spacers



4 x M6 Lock Washer



4 x M8 Lock Washer



4 x Flat Washer

HzUMB Parts



 
1 x Foam Tape



2 x Hex Key



2 x Short Button Head Screw



2 x Paddle w/ Set Screw




4 x Long Button Head Screw




2 x Swing Arm




2 x Adjustable Upright

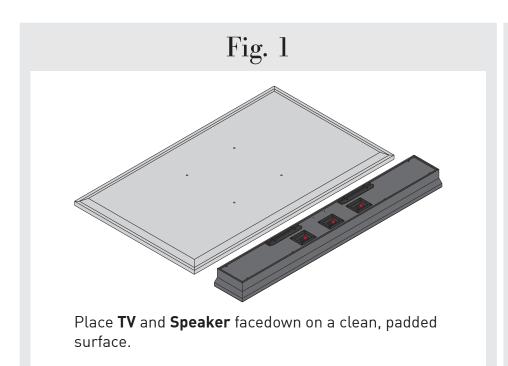


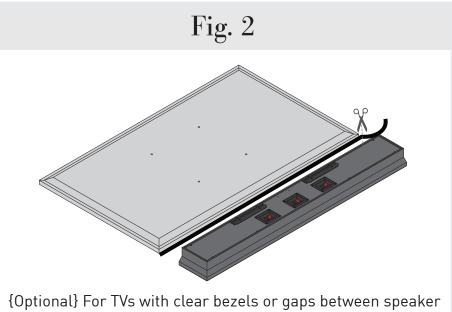

{Optional} For TVs with clear bezels or gaps between speaker and TV, apply **Foam Tape** to TV's edge and cut to size.

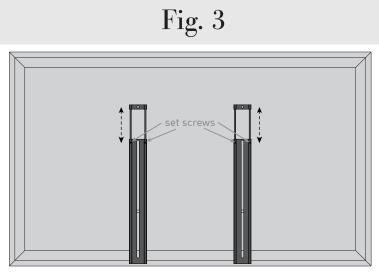


Loosen set screws on **Adjustable Uprights**. Slide **Adjustable Uprights** to align with TV mount holes.

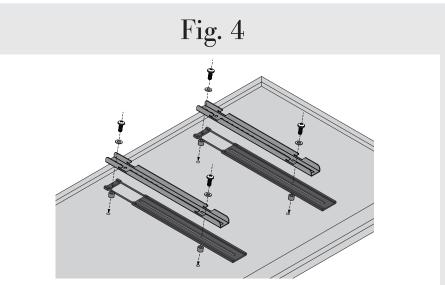


Affix Adjustable Uprights and TV Mount Rails with M6 or M8 Screws and Washers. Use Spacers as needed to ensure the Adjustable Uprights and TV Mount Rails are level.




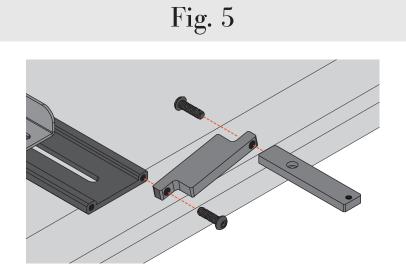

Loosely attach Swing Arms to Paddles and Uprights using Long Button Head Screws.

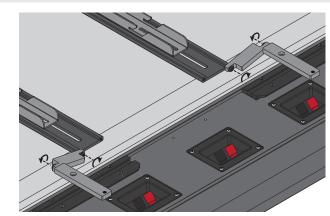

Position speaker so **Paddles** rest on speaker mount rails. Align T-nuts in mount rails with holes on **Paddles**. Tighten **Long Button Head Screws** with extra torque. (Mount rails and T-nuts come attached to speaker.)

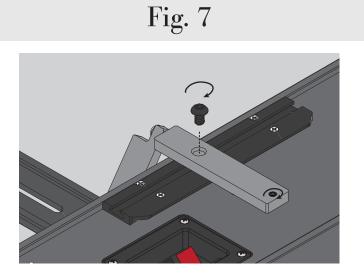

Slide speaker flush and centered with TV. Screw **Paddles** to T-nut in speaker's mount rails using **Short Button Head Screws**. Adjust speaker tilt using set screws in **Paddles**.

Fig. 8

Tighten all screws and set screws down before mounting and wiring the TV and speaker. 2 people are needed for this task.

Questions? Call Customer Service at 1.888.213.5015, Mon-Fri 8AM-6PM EST



QUESTIONS?

Call Customer Service 1.888.213.5015 Mon–Fri 8AM–6PM EST

CALL 1.888.213.5015 OR VISIT WWW.LEONSPEAKERS.COM FOR MORE INFORMATION

ALL INFORMATION COPYRIGHT ©2016, LEON SPEAKERS, INC.