


SM-LP-F-M / SM-LP-F-L

Strong[™] Universal Low Profile Fixed Mount

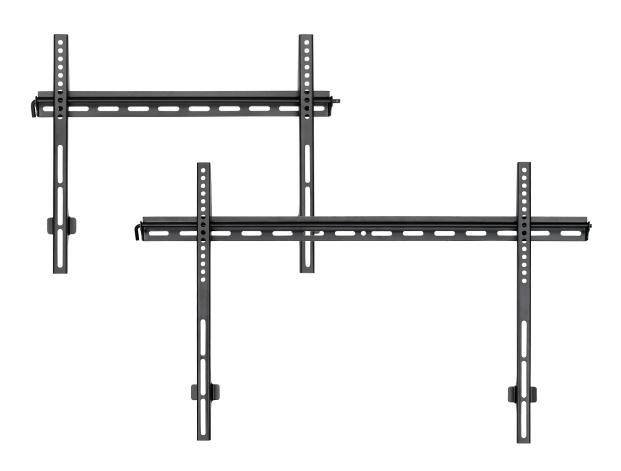

WARNINGS:

- Installation by a qualified professional is highly recommended for this product.
- Do not begin installation until you have thoroughly read and understand these instructions.
- Ensure the mounting wall will safely support four times the combined weight of the Mount and display panel.
- Under no circumstances should this product be mounted to metal studs.
- The manufacturer does not accept responsibility for incorrect installation.

TOOLS REQUIRED:

- Power Drill
- 5/16" and 1/4" Drill Bit
- Phillips Head Screw Driver
- Level
- Socket Wrench with 1/2" Socket head




CAUTION:

These wall mounts are intended for use only with the maximum weight of: 88 lbs/39.9kg - SM-LP-F-M 165 lb/74.8 kg - SM-LP-F-L c(LL)us



HARDWARE KIT

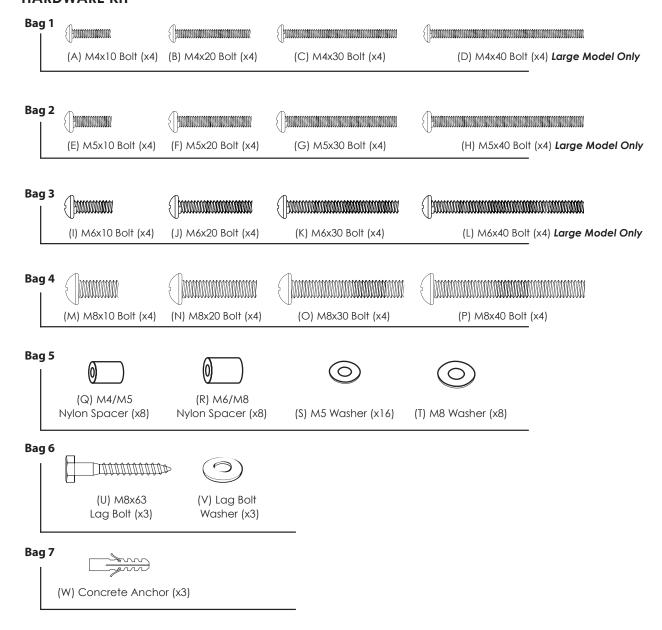

INSTALLATION:

Step 1: Mounting the Wall Bracket Assembly

For Mounting on a Stud Wall

- a. Pre-drill holes into two wood studs using a 1/4" drill bit.
 Be sure to drill into the center of the studs at least 2-1/2" deep. The use of a stud finder is highly recommended.
- b. Insert two Lag Bolts (W) into holes through the Wall Plate and tighten down (Figure 1).

WARNING: Tighten bolts so that wall plate is firmly attached, but do not overtighten. Overtightening can damage the bolts, greatly reducing their holding strength.

For Mounting on a Concrete Wall

a. Pre-drill three holes into concrete using 5/16" drill bits to a depth of 2-1/2". Insert concrete wall anchors (U) and tap in with hammer, if necessary (Figures 2 & 3).

WARNING: When installing wall arm assembly on cinder block, verify first that you have a minimum of 1-3/8" of concrete thickness to be used for the concrete anchors. Do not drill into mortar joints! Be sure to mount in a solid part of the block, generally 1"minimum from the side of the block. Cinder block must meet ASTM C-90 specifications. It is suggested that a standard electric drill on slow setting is used to drill the hole instead of a hammer drill to avoid breaking out the back of the hole when entering a void or cavity.

Concrete must be 2000 psi density minimum. Lighter density concrete may not hold concrete anchor

Make sure that the supporting surface will safely support the combined load of the equipment and all attached hardware and components.

b. Insert three Lag Bolts (U) into the wall anchors through the Wall Plate. Tighten all bolts (Figure 4).

WARNING: Tighten bolts so that wall plate is firmly attached, but do not overtighten. Overtightening can damage the bolts, greatly reducing their holding strength.

Step 2: Mount Arms to television

- a. Determine the diameter of the screw (parts A through P) your TV requires by carefully trying to hand-thread one into the threaded insert on the rear of the TV. If there is any resistance, stop immediately.
- b. Spacers are commonly needed on televisions with curved backs or recessed screw inserts. The screw will thread through the appropriate washer(S, T), any spacer needed (Q, R) and the arms into the TV (Figure 5).
- c. Ensure the arms are installed flat side to television and are square to each other after all screws have been installed (Figure 5).
- d. Make sure all screws are secure, but do not over-tighten them.



Figure 1

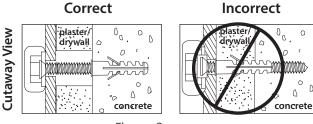


Figure 2

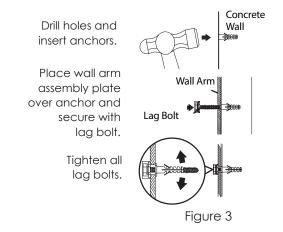




Figure 4


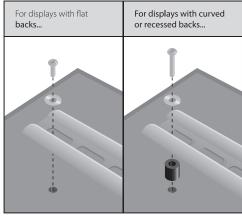


Figure 5

Step 3: Hang television on to the Wall Plate

a. Carefully lift the television to hook the arms over the top lip of the wall plate. Allow the lower portion of the arms to swivel in under the bottom lip of the wall plate. Do not release the television until it is completely connected to the wall plate.

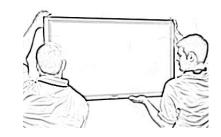

b. Insert the safety bar at the bottom of the mount to avoid having the display knocked off the mount. A padlock can be used at one end to help prevent theft.







Lifetime Limited Warranty

StrongTM Mounts have a Lifetime Limited Warranty. This warranty includes parts and labor repairs on all components found to be defective in material or workmanship under normal conditions of use. This warranty shall not apply to products which have been abused, modified or disassembled. Products to be repaired under this warranty must be returned to SnapAV or a designated service center with prior notification and an assigned return authorization number (RA).

For Technical Support call 1.866.838.5052