

- 1) Weather Information
- 2) Choose Door Station
- 3) Button "Open Door"
- 4) Button "Favorite"
- 5) Button "Mute"
- 6) Button "Menu"
- 7) Button "Enable Listen And Speak"
- 8) LED Status Bar
(To visualize doorbell events etc.)

END USER MANUAL

A1101 IP Video Indoor Station

BASIC FEATURES



Take/Exit Call

During an incoming call the display turns on automatically, the camera view is displayed and the LED status bar lights up.

Press:

 
to start the call with the person at the door station. lights up during the call.

again to end the call.

Maximum call duration: 3 minutes
After this time has expired, the call is automatically ended.



Standby screen after: 3 minutes
Touch the display or press to reactivate the screen.

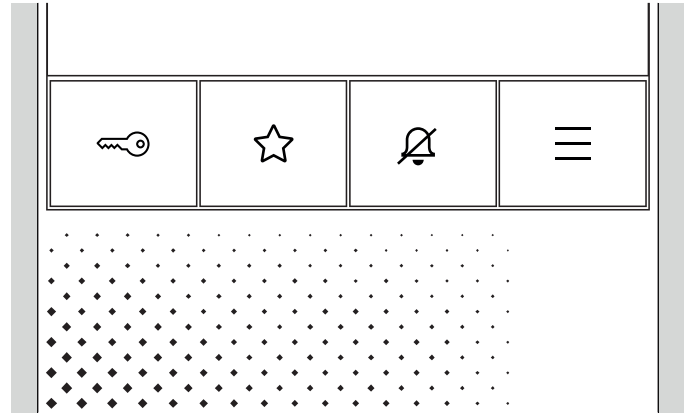

Open Door

Press:

to open the door.

may be assigned to a function (e.g. further door opener). If this is not the case, no action is executed.

Mute The Device

Press:

to mute the device. lights red while this setting is active.

again to switch the tone back on.

Open Menu

Press:

 
to enter the menu.

Restart The Device

Press:

+ + + simultaneously to restart the device.


LIVE-SCREEN

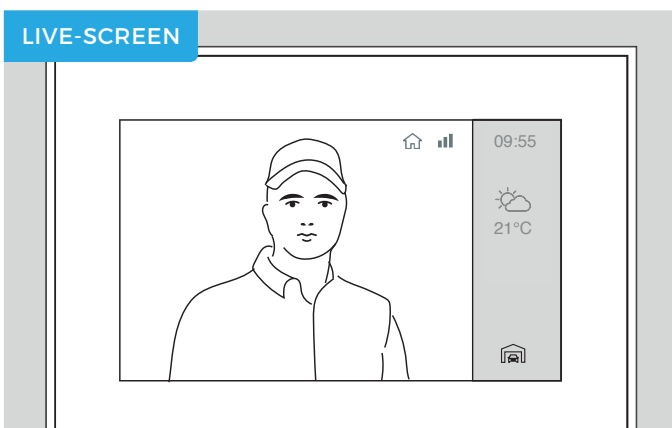

Switch Between Live Views

You can switch between the live views if there is more than one door station connected to your indoor station. Tap the "Door Station selection" icon in the bottom right corner to change the station.

 The reception symbol indicates the connection quality of your indoor station to the door station.

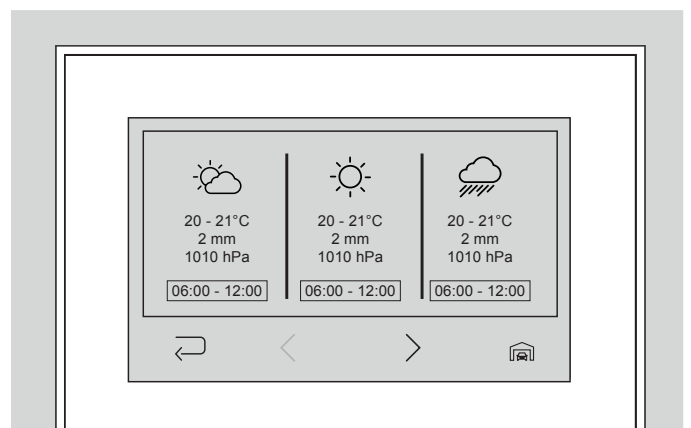


Weather Information

From the live screen, tap the weather icon in the right sidebar to access the weather information for the current day.

 Tap:

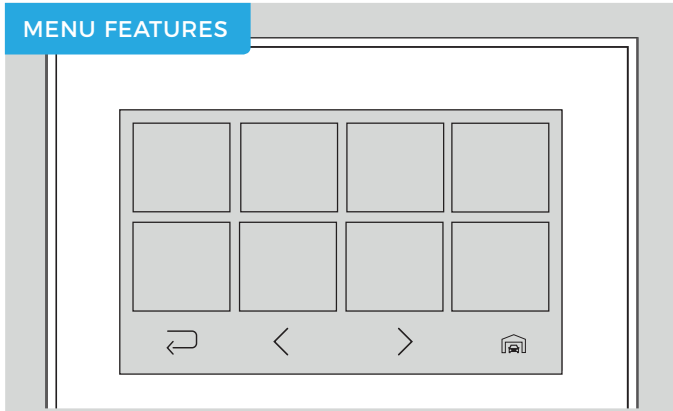


to open the weekly overview.



 
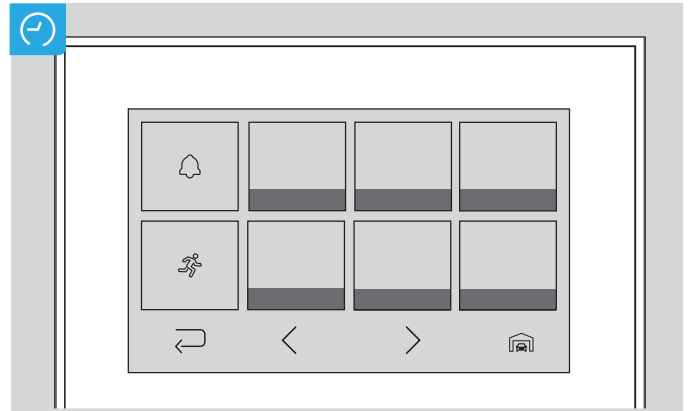 
Menu navigation

Tap the live video or press  to enter the menu.



Tap:

-  to go back.
-  to navigate to the left side of the menu.
-  to navigate to the right side of the menu.



Press  to return to the live screen.



View History


In the history, you can review past doorbell () and motion events () with date and time.

Tap:



-  to navigate to previous events.
-  to navigate to next events.

Touch the image to display it in full-screen mode.

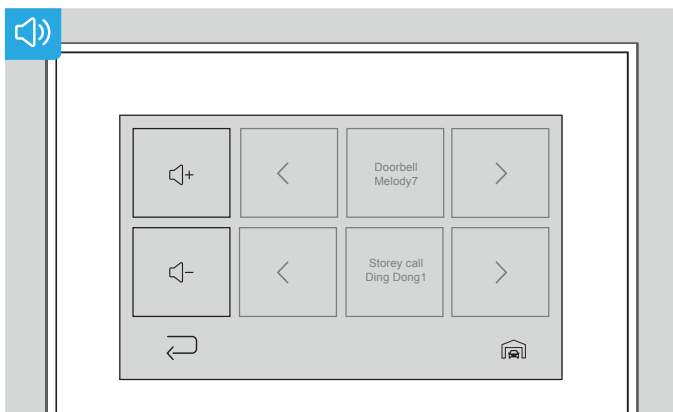 

To view the history of another door station, tap the "Door Station selection" icon in the bottom right corner.

 


Volume up/down

 "Settings" →  "Sound"

Tap:

-  to turn the volume up.
-  to turn the volume down.

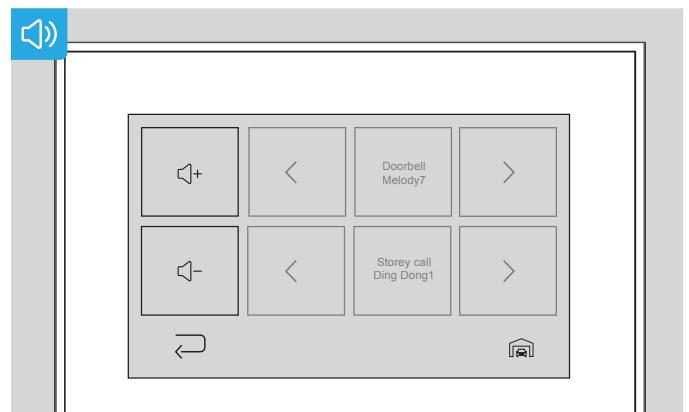



Select sound

 "Settings" →  "Sound"


Select the sound for the doorbell.
Select the sound for the storey call if available.

Tap:

-  to select the previous sound.
-  to select the next sound.



Light on/off

 Tap "Light" to switch the infrared light of your door station on/off.



Relais switch

 Tap "Relay" to get to the relay overview.

Here you can trigger all connected relays.



Cleaning mode

 Tap "Settings" →

 Tap "Cleaning Mode" to deactivate the touch function for 30 seconds.