



# UFE1160

## 1HR FIRE RATED SPEAKER COVER

### RETRO-FIT INSTALL GUIDE



UFE1160

#### DESCRIPTION

The UFE1160 is an UL fire-rated flexible sound dampening system that take the place of a traditional in-ceiling back box. Retrofittable for ceiling cutouts from 5<sup>7/8</sup>" up to 10<sup>5/8</sup>". The flexible material enables the cover to be fitted around obstacles, enabling easy and quick retrofit installation.

#### SAFETY GUIDELINES

Be sure the electricity to the system you are working on is turned off; either the fuse removed or the circuit breaker set at off.

#### CONTAINS STONE WOOL INSULATION

Stone fibers may cause temporary mechanical irritation to the skin, throat, nose and eyes.

#### FIRST AID

**SKIN** | If irritation occurs, do not rub or scratch. Rinse under running water prior to washing with mild soap and water. Consult a physician if irritation persists.

**THROAT AND EYES** | If irritation occurs, flush eyes with water and/or drink water to clear throat. Do not rub the eyes. Consult a physician if irritation persists.

#### PRECAUTIONS

Wear long sleeve, loose fitting clothing, gloves and eye protection. For additional information, refer to the Material Safety Data Sheet.




# UFE1160

## 1HR FIRE RATED SPEAKER COVER



### RETRO-FIT INSTALL GUIDE

**STEP 1.** Using your cutout template cut a hole accordingly for your Origin Acoustic speaker.


For example: 8 ¾ (222mm) for the D80 & D60 Director Collection Series or 10 ⅜ " (264mm) for the D10 Director Collection Series.

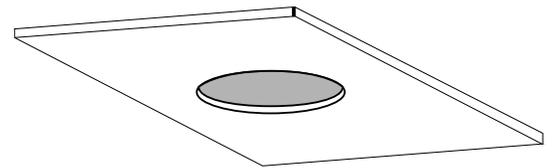

**STEP 2.** Use a blade to pierce a small hole where the two grooves are located at the top of the UFE1160 speaker Cover. Draw the wire cables through the opening.

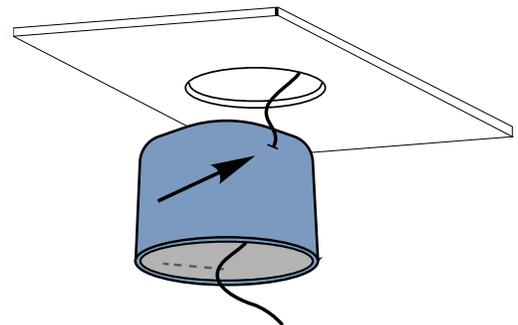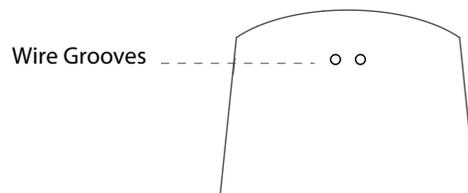

**STEP 3.** Carefully fold the UFE1160 Speaker Cover inwards, and push through the pre-cut ceiling opening. Center the UFE1160 into the opening & squeeze upwards into the ceiling hole.

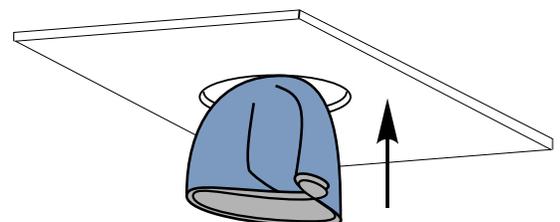




# UFE1160

## 1HR FIRE RATED SPEAKER COVER

### RETRO-FIT INSTALL GUIDE

**STEP 4.** Make sure that the speaker cover has sprung back into its original shape, and sits flush with the backside of the drywall board.

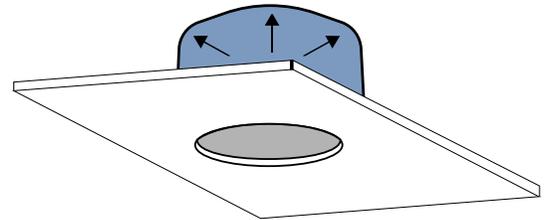

**STEP 5.** Once drywall is ready, install the BZ ring and the speaker as usual. Refer to the Director Collection Speaker Manual for guidelines.

