



2. SECURE FSR SERIES T6-LB UNIT TO BRACKET AND DETERMINE MOUNTING LOCATION ON TABLE UNDERSIDE.

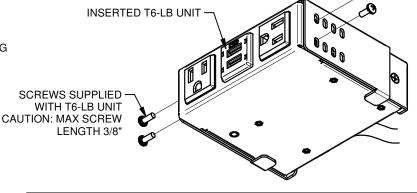

3. REMOVE T6-LB UNIT FROM BRACKET. USE BRACKET AS TEMPLATE FOR PILOT HOLES AND SECURE BRACKET TO TABLE WITH SUPPLIED MOUNTING SCREWS. REINSTALL T6-LB UNIT AND MAKE ELECTRICAL CONNECTIONS AS REQUIRED.

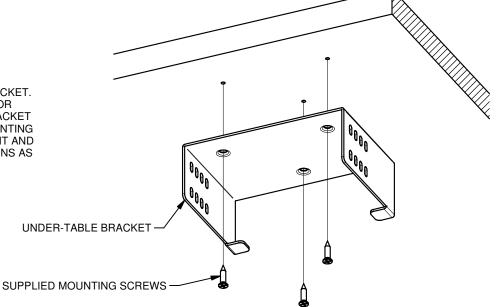

43322 LIT1640